



Close House Farm Otley Road Skipton BD23 6DR  
Telephone: 01756 792491 or 794484 Fax: 01756 791696

E-mail: [worldsfinest@tncook.co.uk](mailto:worldsfinest@tncook.co.uk) Internet: [www.tncook.co.uk](http://www.tncook.co.uk)

Registered in England No. 1182390 VAT Reg No. 180 9855 28

THE WORLD'S FINEST RANGE COOKERS



## Everhot 'Hidden Features'

### ('Black Glass Facia Controller' from Summer 2017)

#### Top Oven 'Boost'

Ordinarily the top oven takes from 1-2 hours to heat from 'cold' using its own element. (It'll be quicker if the oven is already partially heated.)

It is possible to heat the oven quickly by using the more powerful grill element and this is built in as a 'hidden function' in the electronic control.

To activate the top oven boost:

- **Press and hold** the top oven power button (about 2 seconds initially but keep your finger on the button) it will beep once and the display will change to 'Off' **DO NOT RELEASE**, keep held down for another 2 seconds - there will be a second beep and the display will change to 'b5t' (meaning 'boost') and the grill indicator LED will change to red and flash.

This uses the grill element to heat the top oven to within 20 degrees of its target temperature, returning to the oven's element (and the 'over-run' from the grill element) to finish the job.

Heat-up time is reduced to around 20 minutes or so; quicker than the oven's element to do the same job and more reliable than using the grill on its own.

Note: The boost function won't work if the top oven is within about 30 degrees of its target temperature.

(If you change your mind and want to cancel the boost, turn the top oven off, then back on again in the normal way [using its on/off button].)

July 2017