



Close House Farm Otley Road Skipton BD23 6DR
Telephone: 01756 792491 or 794484 Fax: 01756 791696

E-mail: worldsfinest@tncook.co.uk Internet: www.tncook.co.uk

Registered in England No. 1182390 VAT Reg No. 180 9855 28

THE WORLD'S FINEST RANGE COOKERS



Everhot 'Hidden Features'

('Black Glass Facia Controller' from Summer 2017)

'ECO Advance'

When using timed ECO mode it's possible to 'advance' to the next 'stage', much like you would 'advance' your central heating control.

If you're in the lower ECO temperatures, advance brings the cooker up to normal temperatures and if you're in the normal cooking temperatures, 'advance' will put the cooker down to its ECO settings.

The cooker then falls back in to its normal program at the next-but-one 'set-point'.

For example, the Everhot is set to come out of ECO at 4pm then go back to ECO at 10pm. You decide to go out to eat and don't need the Everhot this particular evening - you could 'advance' so it goes back in to ECO earlier. It would ignore the 10pm instruction (you advanced it, so it's already in ECO) but would then do as the program instructed for the next day.

To activate ECO Advance:

- **Press and hold** the ECO button until you hear a short beep from the controller and the displays change away from the oven/hotplate temperatures (about 2-3 seconds), release the button when you hear the beep and the display changes.
- Next, press once on the bottom oven power button (the display will flash 'SKP' (to indicate 'skipping' to the next ECO stage) and the cooker will advance in/out of ECO mode.

July 2017