



Close House Farm Otley Road Skipton BD23 6DR  
Telephone: 01756 792491 or 794484 Fax: 01756 791696

E-mail: [worldsfinest@tncook.co.uk](mailto:worldsfinest@tncook.co.uk) Internet: [www.tncook.co.uk](http://www.tncook.co.uk)

Registered in England No. 1182390 VAT Reg No. 180 9855 28

THE WORLD'S FINEST RANGE COOKERS



## Everhot 'Hidden Features'

(**'Silver Facia Controller – April 2014 – Summer 2017'**)

### 'ECO Advance'

When using timed ECO mode it's possible to now 'advance' to the next 'stage', much like you would 'advance' your central heating control.

If you're in the lower ECO temperatures, advance brings the cooker up to normal temperatures and if you're in the normal cooking temperatures, 'advance' will put the cooker down to its ECO settings.

The cooker then falls back in to its normal program at the next-but-one 'set-point'.

For example, the Everhot is set to come out of ECO at 4pm then go back to ECO at 10pm. You decide to go out to eat and don't need the Everhot this particular evening - you could 'advance' so it goes back in to ECO earlier. It would ignore the 10pm instruction (you advanced it, so it's already in ECO) but would then do as the program instructed for the next day.

To activate ECO Advance:

- Press **and hold** the bottom oven power button (it will say 'Off' **but DO NOT RELEASE**), **keep held down for another 2 seconds**, then it will change modes and the ECO indicator LED will change to orange.

If you change your mind and want to cancel the 'advance', press the ECO button to return to the desired mode (you may need to press more than once to 'scroll' between ECO-ON [LED green], ECO-Off [LED not on] and ECO-Timed [LED flashing].)